


**INSTRUCTIONS FOR DRILLING SECONDARY LEAF OF FIRE DOORS EQUIPPED WITH THE NEW STANDARD LOCK CR4/5 FOR SUBSEQUENT INSTALLATION OF PANIC CROSSBAR.**

- 1) On the push side of the secondary leaf drill a hole of diameter mm 25 at mm 1067 from the lower edge and at mm 95 from the side edge.

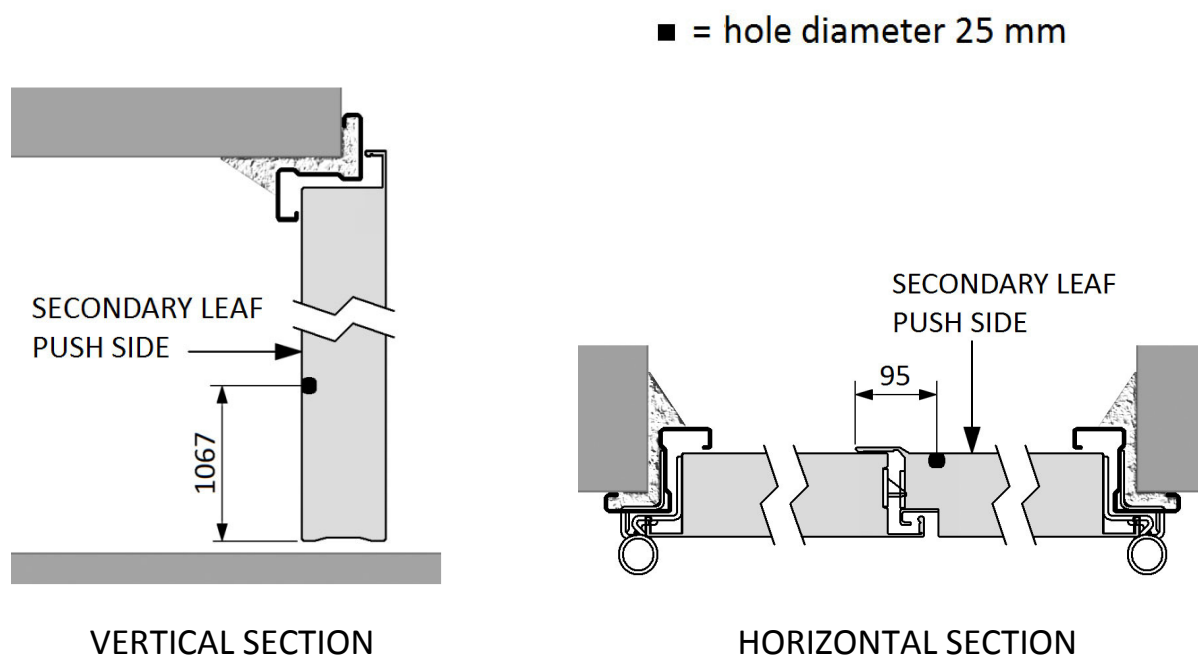

- 2) Insert and fasten the pole 9 x 9 to the mechanism of the crossbar.
- 3) Install on the door-leaf the crossbar with the pole already fastened to it and follow the installation instructions of the crossbar.